


INSTALLATION INSTRUCTIONS:

# “EVERGREEN QUIK-SEAL” ADAPTERS AND “QUIK-PATCH®”

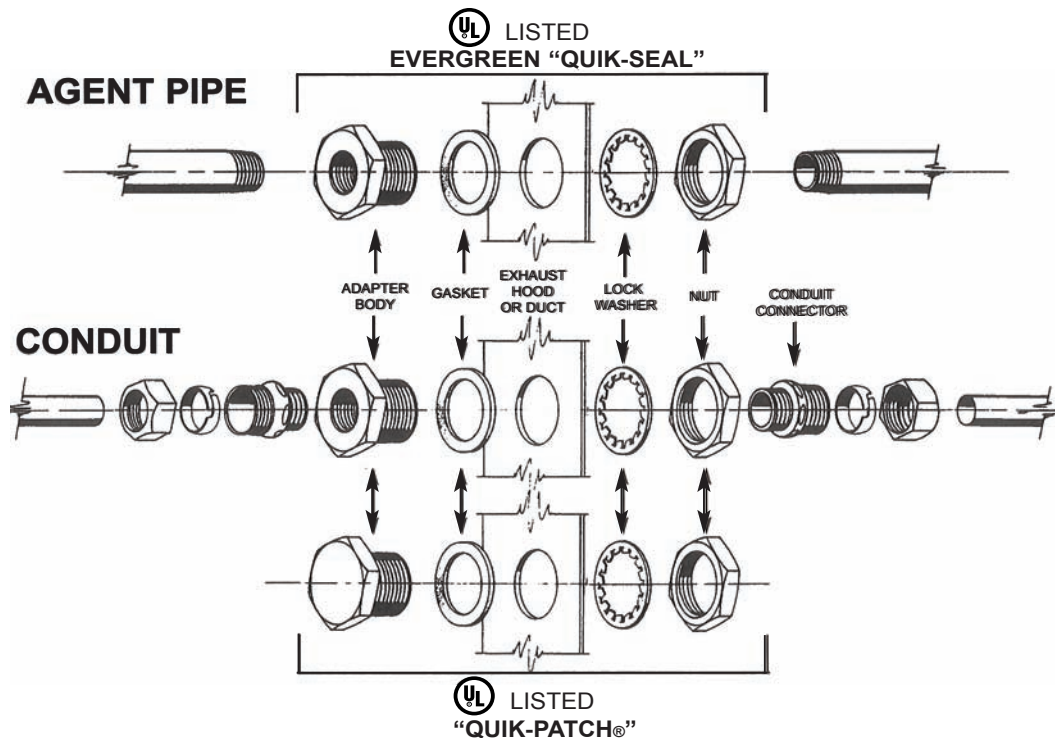

P/N	FITTING SIZE	HOLE SIZE
218	1/4" Pipe	3/4"
170	3/8" Pipe (Style "A")	1 1/8"
899	3/8" Pipe (Style "B")	7/8"
171	1/2" Pipe	1 1/8"
172	3/4" Pipe	1 3/8"
213	1" Pipe	1 5/8"
265	1 1/4" Pipe	2"
268	1 1/2" Pipe	2 1/4"
1098	1 1/2" Pipe w/o Int. Threads	2 1/4"
430	7/8" Corner Pulley Adapter	1 1/8"
682	15/16" Corner Pulley Adapter	1 1/8"

“QUIK-PATCH®”	
P/N	HOLE SIZE
285	3/4" to 7/8"
916	7/8" to 1"
205	1 1/8" to 1 5/16"
689	1 3/8" to 1 9/16"
694	1 5/8" to 1 7/8"
292	2" to 2 1/4"
276	2 1/4" to 2 1/2"
1476	7/8" Corner Pulley Adapter
1478	15/16" Corner Pulley Adapter

To install the ‘EVERGREEN QUIK-SEAL’ ADAPTER and the ‘QUIK-PATCH®’, proceed in the following manner.

1. Drill, punch, or saw hole in the sheet metal surface according to the chart below.
2. Install one high temperature gasket on the fitting body.
3. Insert fitting through the drilled hole.

4. Install lock washer and nut. Hand tighten, then wrench tighten 1/2 turn (to approximately 50 ft. lbs.). For the 1/4" fitting, hand tighten, then wrench tighten 1/4 to 1/2 turn (to approximately 25 ft. lbs.).
5. Install agent pipe into “EVERGREEN QUIK-SEAL ADAPTER.
6. When using EMT conduit, install steel conduit adapters in each end of the fitting and wrench tighten. Install conduit to the conduit connector in the normal manner.